

XY IMAGER *i*

Addition to the user manual version 1.6

www.xyimager.com

Important!

The manual of the XY IMAGER „i“ devices is an addition to the general manual of the XY IMAGER devices. Please take note of all safety instructions in the general manual and take care of them when you are starting up the devices.

Difference between XY IMAGER standard devices and XY IMAGER „i“ devices

The XY IMAGER „i“ devices XY SPIN TOP 50 i and XY SPIN 300 i don't differ from the standard devices XY IMAGER SPIN TOP 50 and XY SPIN 300 concerning the performance and application.

XY „i“ devices were additionally equipped with an own intelligence. For producing 360° pictures they can be operated independent from the central control unit XY CONTROL. For this you just need XY DISPLAY only or the XY IMAGER USB adapter.

Starting up of the turntables XY SPIN TOP 50 i and XY SPIN 300 i

The turntable XY SPIN TOP 50 i and XY SPIN 300 i have to be assembled and mounted according to the general manual. You can use the turntable XY SPIN TOP 50 i as suspension module or as stand module as well. A synchronisation with XY SPIN 300 and the 3D robotic arm XY BOOM is only possible in combination with the central control unit XY CONTROL.

Independent working with XY „i“ devices

Connections



Display Connection

At „display“ connection you can optional connect the XY DISPLAY only directly or the USB adapter.

Working in synchronous operation with XY CONTROL

If you want to use the turntable in combination with XY BOOM for 3D shots or make a synchronous operation with another XY SPIN turntable, you need the central control unit XY CONTROL.

Connect the control unit XY CONTROL at the provided outputs. XY CONTROL takes over the electric power supply and the camera control. A direct electric power supply is not necessary.

You can find all functions and instructions for operation of the turntables in the general manual for the XY IMAGER devices.

Changes, misprints and errors excepted.